

# **BORGESON**

***Steering You Forward***


## INSTRUCTIONS FOR BORGESON #800500/800502

### **MOUNTING A BORGESON REMOTE PUMP TO #800500/800502 PUMP MOUNT KIT**

Mounting the Borgeson remote P/S pump to a part #800500 pump mounting kit will require you to drill out one set of threads with a 5/16" drill bit and tap an existing metric hole to 5/16-18. SEE PHOTO BELOW.

**NOTE: YOU MUST USE A PULLEY INSTALLATION TOOL TO AVOID DAMAGING P/S PUMP**

*The pump is not pre-drilled to allow it to attach to different mounting kits.*

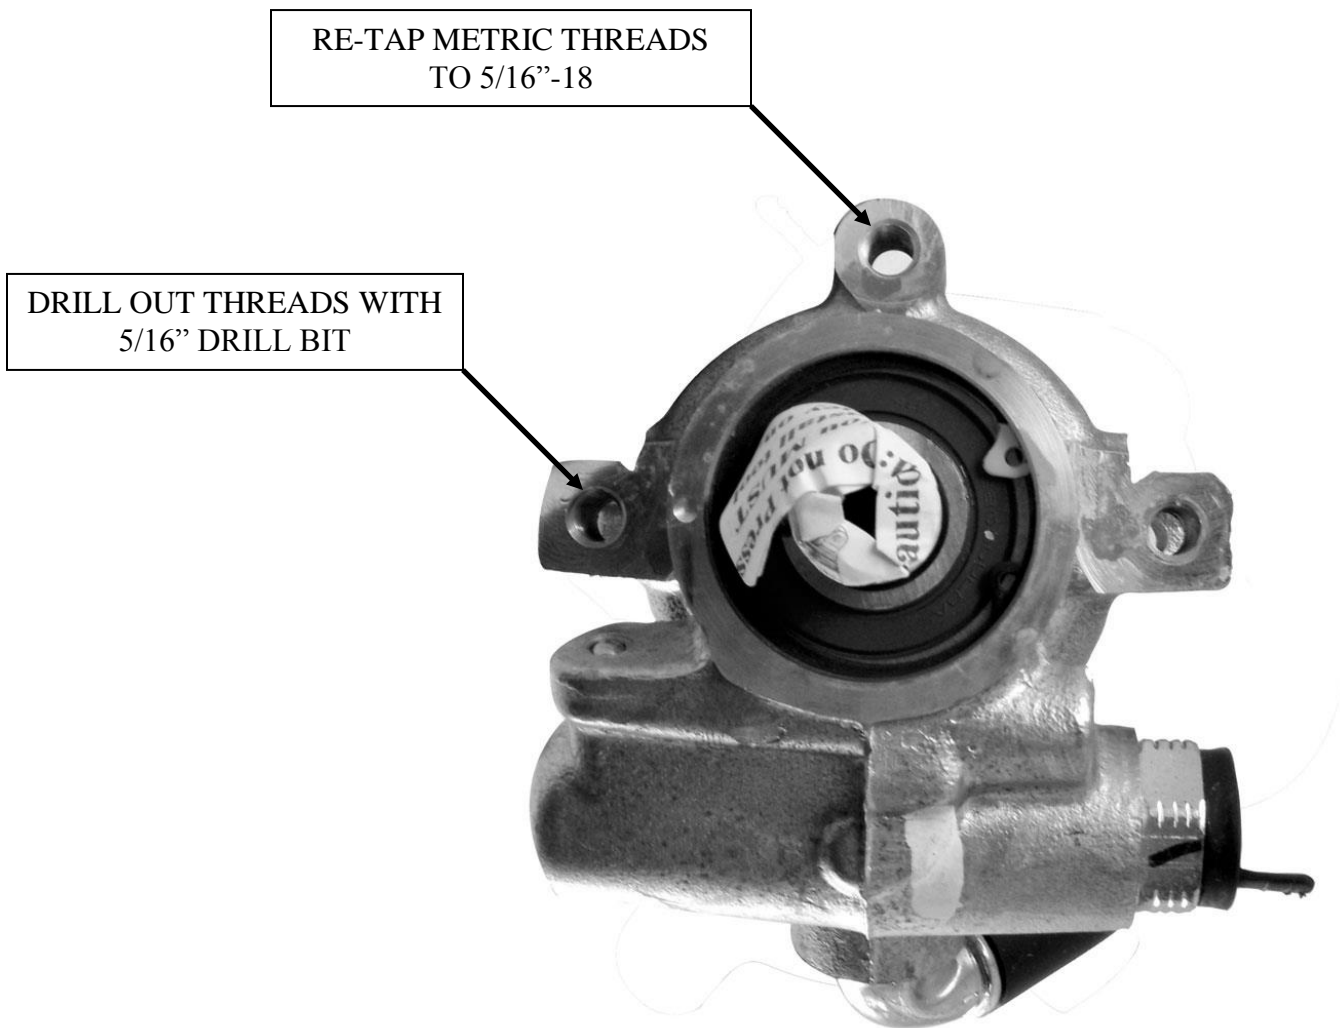

Borgeson Universal Co., Inc.  
9 Krieger Dr. Travelers Rest, SC 29690  
[www.borgeson.com](http://www.borgeson.com)